

POWERLINK GM5




High Power Wireless LAN USB Adapter

802.11b/g/n w/High Gain 5dBi Antenna

QIG

Part#:PL-GM5


Prior to the installation, please make sure your computer and Give-Me-Five wireless adapter are well connected.

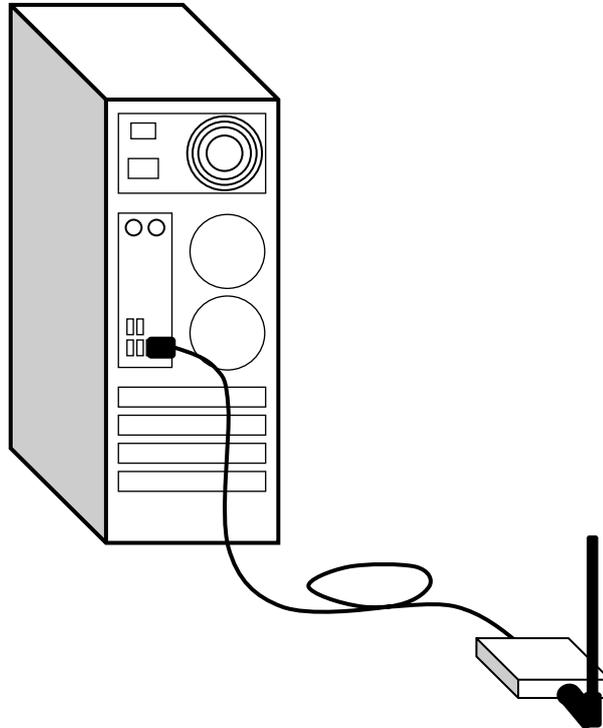

PART I – Install WLAN Adapter Driver

Install WLAN adapter Driver for Windows XP

1. If you insert the Wireless LAN USB Adaptor into your computer, the following hardware setup wizard will pop up if you have never installed driver for Ralink RT3070. Click **Cancel** to cancel installation from Windows.

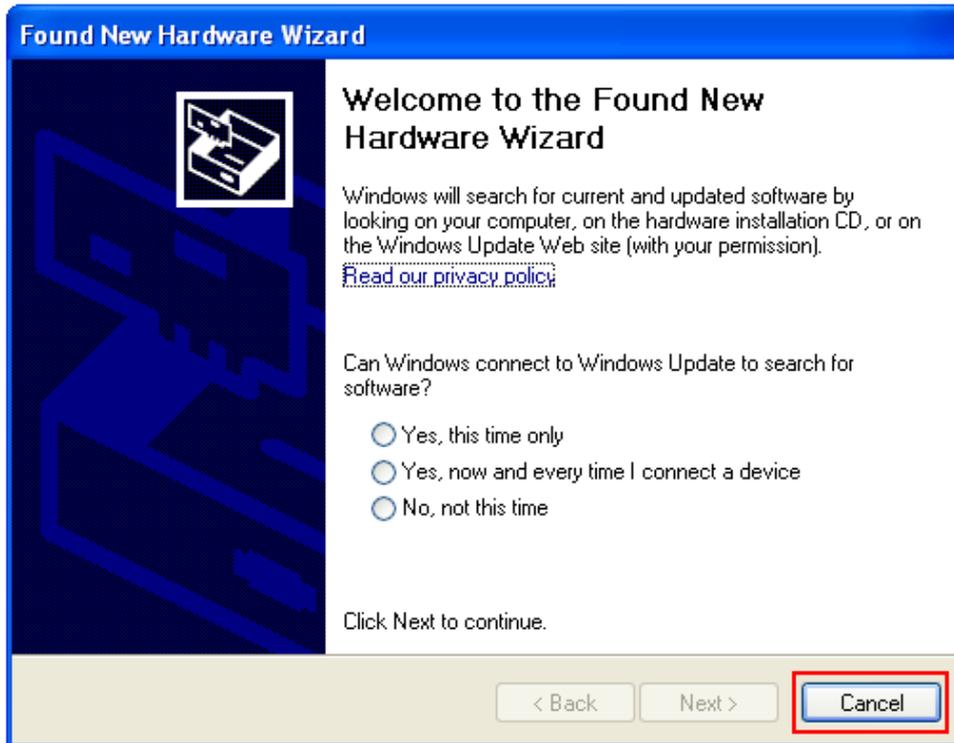


2. Insert your installation CD into CD drive of your computer. An installation page will pop up for you to install. Click **Utility Driver**.




If the installation page does not appear, double click CD-ROM drive the installation CD was inserted to, or open the CD-ROM drive then click **Autorun.exe**


3. Click checkbox to accept the terms of license agreement, then click **Next**

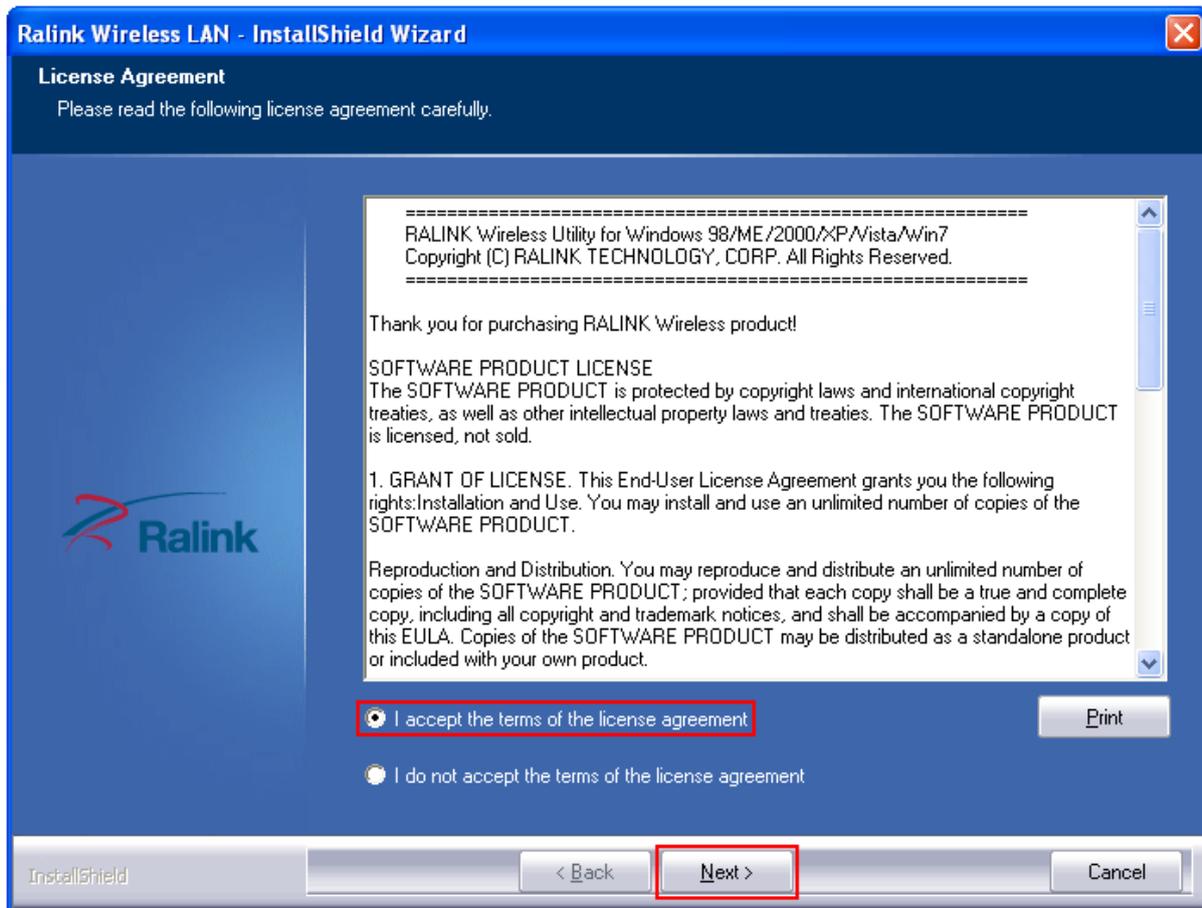


4. Select setup type for installing driver only, then click **Next**

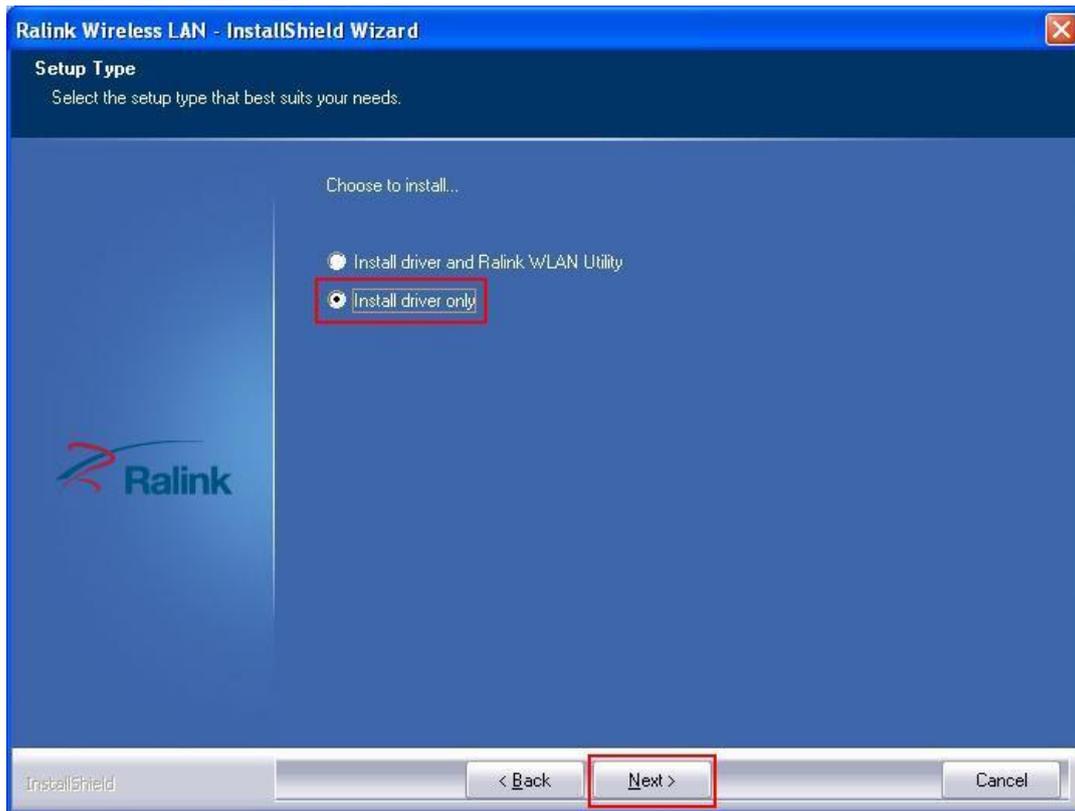

5. Click **Install** to continue driver installation

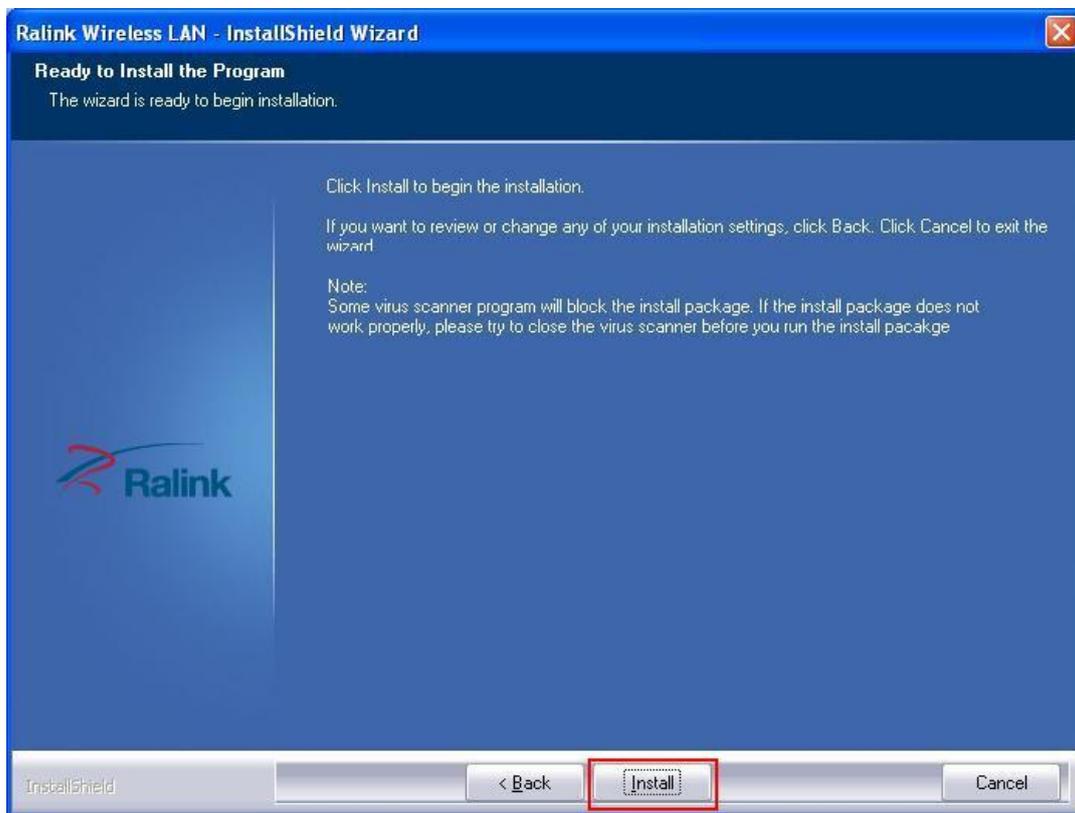

6. Click **Finish** to complete the driver installation.

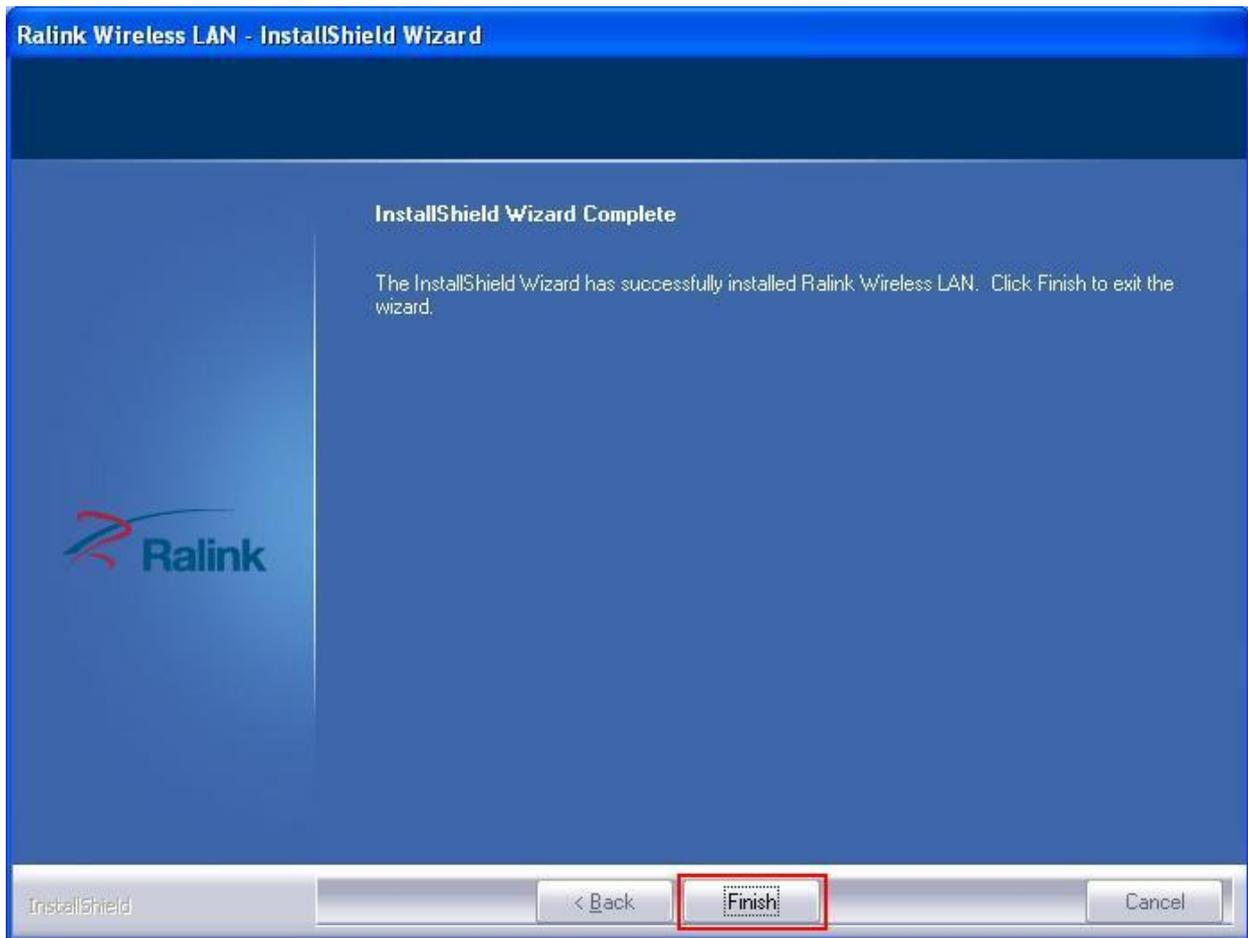


If you are Windows 7 user, please change your notification level of UAC (User Access Control) settings first. It is not necessary to make any change for Windows XP users.


PART II - Install Give-Me-Five utility

Install Give-Me-Five utility for Windows XP


1. Click on GM5 Utility

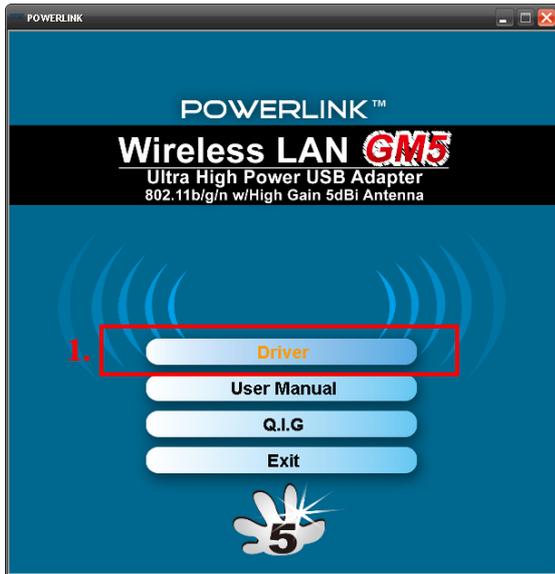


2. Click Next to start Give-Me-Five installation.

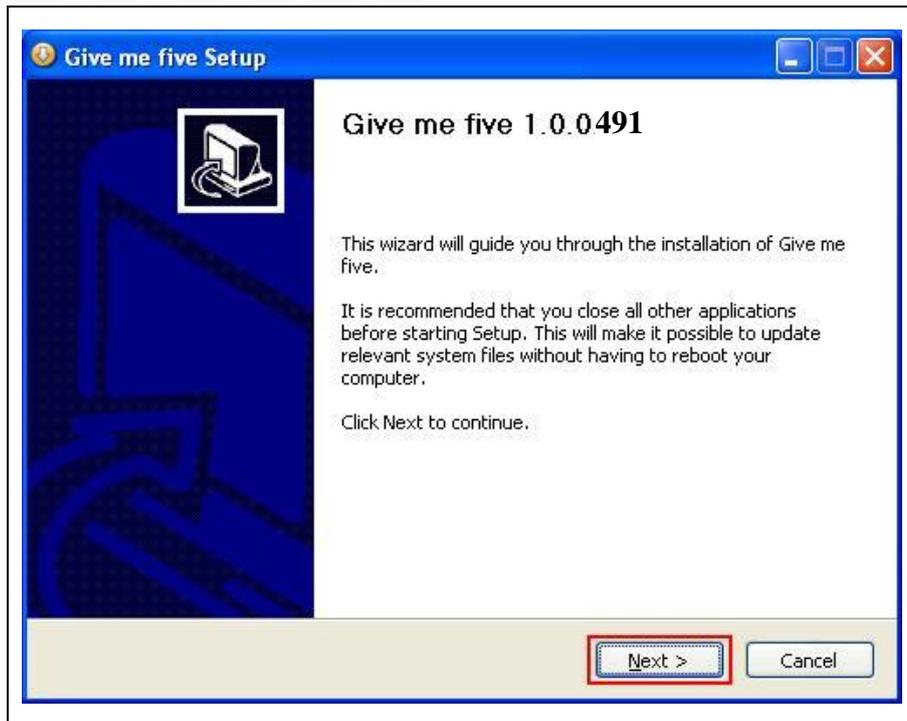

3. Choose install component then click **Next**. Recommend installing all components by default.

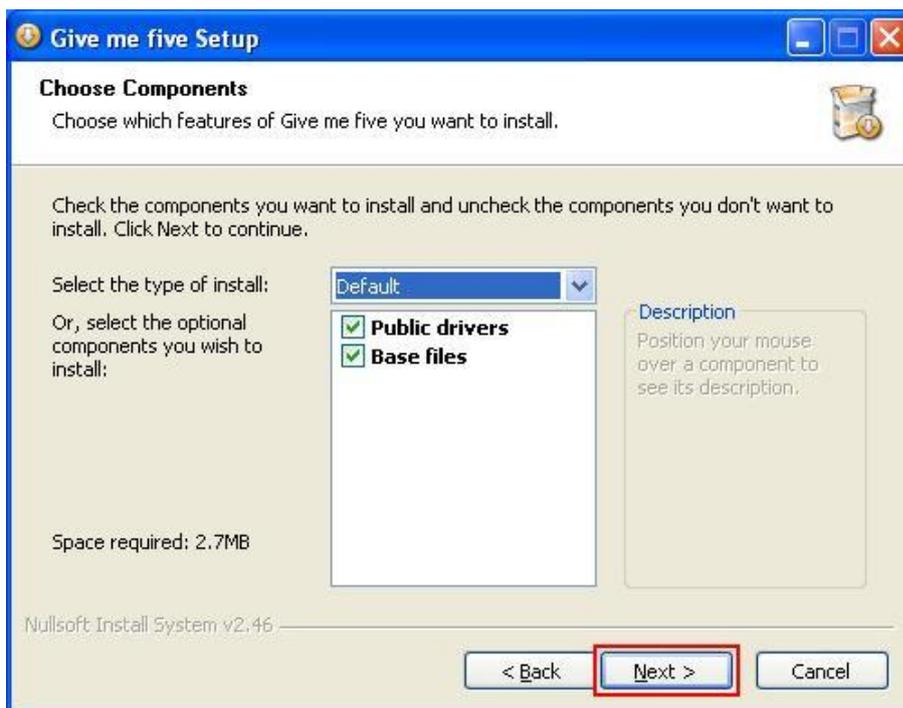

4. Choose install location by click Browse button, change destination folder if needed, and then click **Install**.

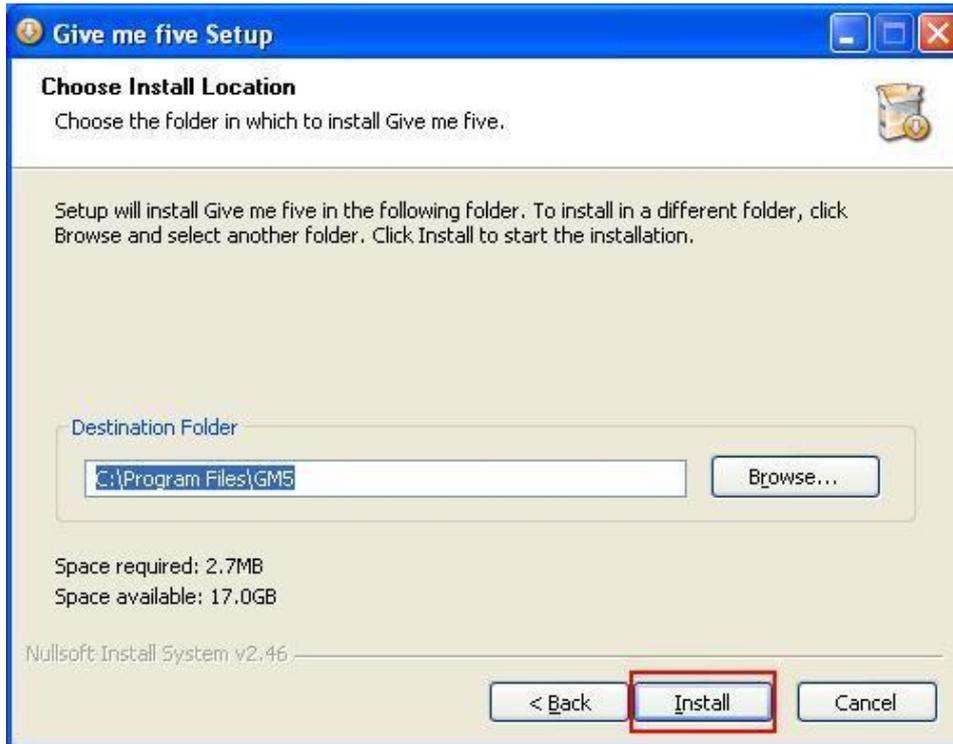

5. Select Reboot now then click **Finish** to restart your computer.



Install Give-Me-Five utility for Windows 7

Installation of Give-Me-Five utility for Windows 7 users is similar to steps as in Windows XP.

Quick Start

Following the steps in previous chapter, we have installed driver for network adapter and *Give Me Five* utility. The following steps will guide you how to setup a connections and combine bandwidth for your connections;

1. Connect to multiple internet connections one at a time by connect wireless adapters (including or excluding *Give Me Five*) to APs



2. Open *Give Me Five* utility by clicking  on desktop. The utility pop up.




Note

Once you opened *Give Me Five*, the utility will take over the control of NIC. The connection status of NICs will soon turn into **Limited access**. Just continue your steps. Don't try to go back to re-connect your NICs.


3. Click **Add** button one at a time to add available connections from pull down menu.



4. After adding all of the available connections, click **Estimation** button and waiting estimation results.

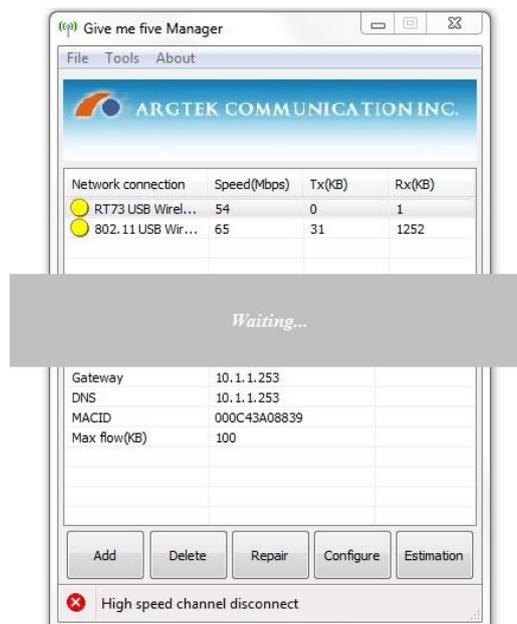

5. Click **OK** to apply settings from estimation results.

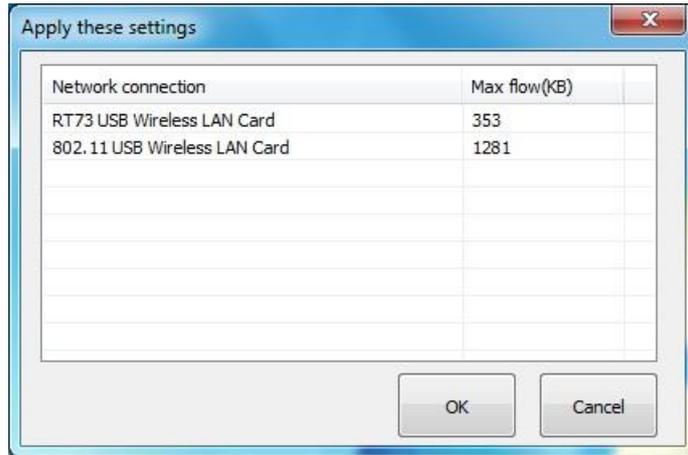


6. Browse internet and enjoy your incredible download speed.


Don't try to unplug NICs during Give Me Five is active. This is to ensure Give Me Five get the optimum performance.

Steps for changing notification level of UAC settings

1. Open **Control Panel** and click **System and Security**

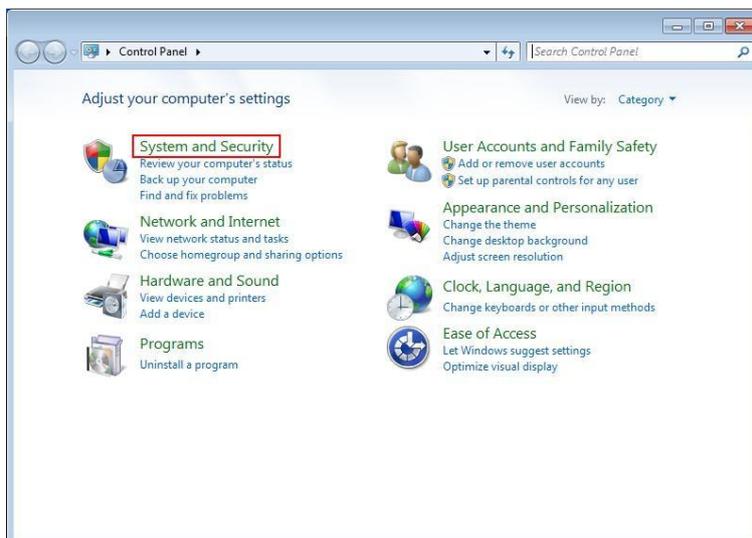

2. In **Action Center**, click **Change User Account Control settings**

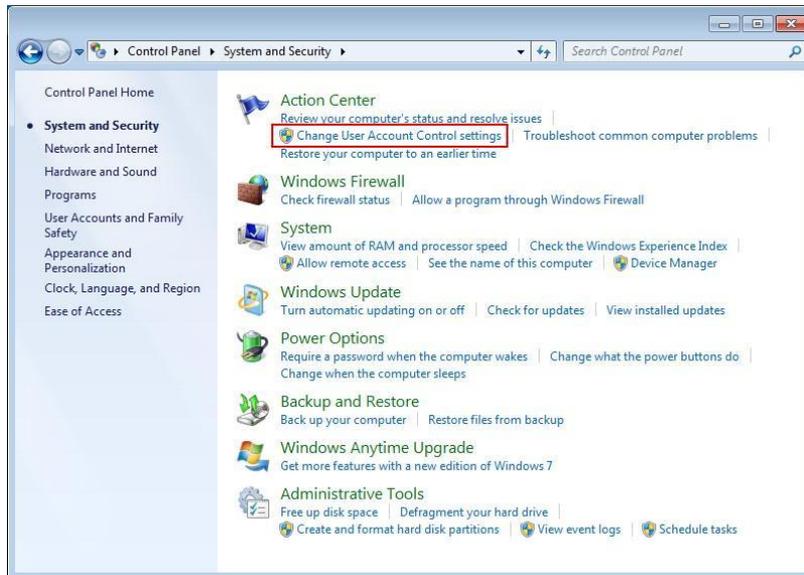

3. Drag notification button from default down to **Never Notify**, then click **OK**.

