

POWERLINK


Ralink Utility Installation Guide for MAC OS X

1, Download the Drivers first:

Download the driver, see <http://www.premiertek.net/top/download.html> for driver if you don't have the driver CD

2, Selecting the Downloaded Drivers:

Locate the dmg file on CD or the file downloaded. Double click it, and choose your MAC OS version

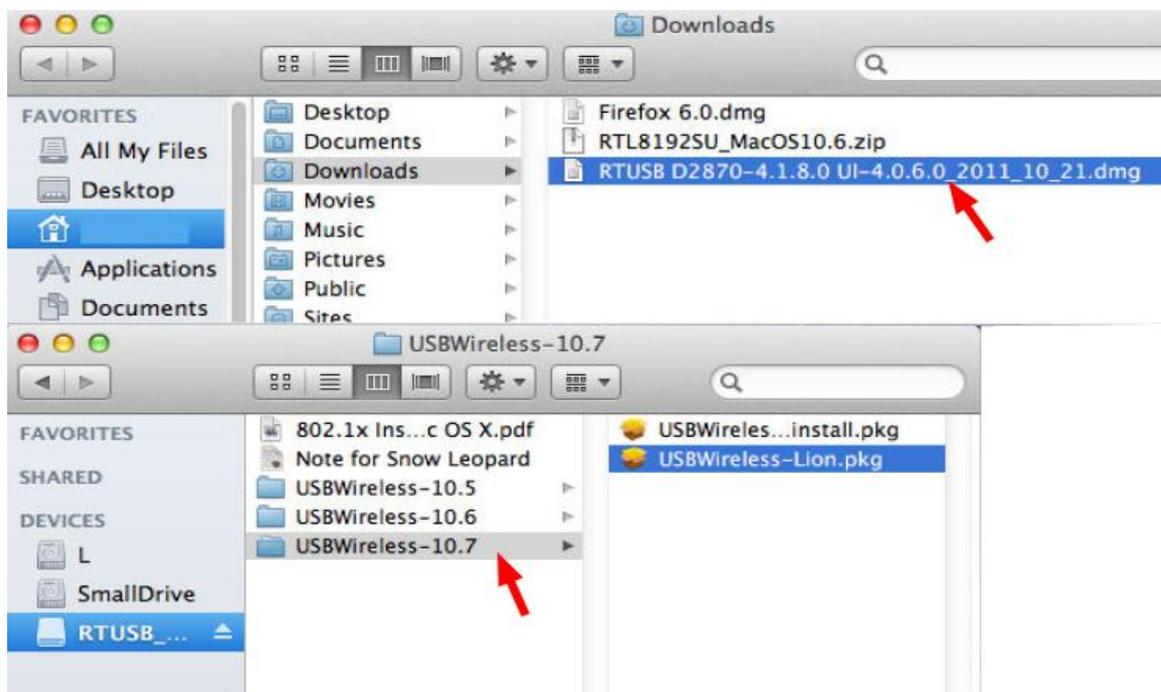

3, Installing the Wireless Driver:

Double-click on the file installation .pkg file

4, Starting the Ralink Wireless Installer:

Following the steps and continue

5, Selecting the Destination and Install

6, Finishing the installation and Restarting computer

7, Find the Wireless Utility under the Applications folder

POWERLINK


Ralink Utility User Guide




8, Plugging in your Wireless USB adapter:

Disable Airport or other wireless adapter before you can use Ralink Utility

9, Once Wireless Utility opened, you can RESCAN and select the network you want to connect.

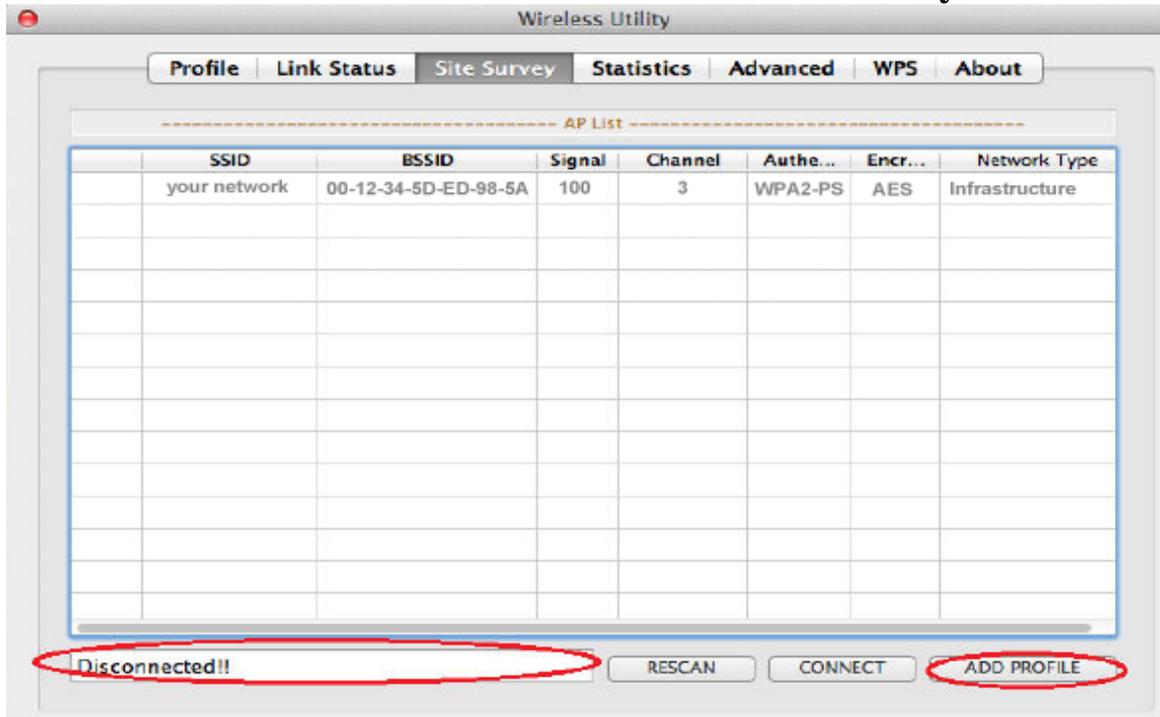

10, Once high-lighted the network, click **ADD PROFILE** button, select the Authentication type and Encryption type of your network. Type in correct Pre-share key (wifi password). Click **ACTIVATE**.

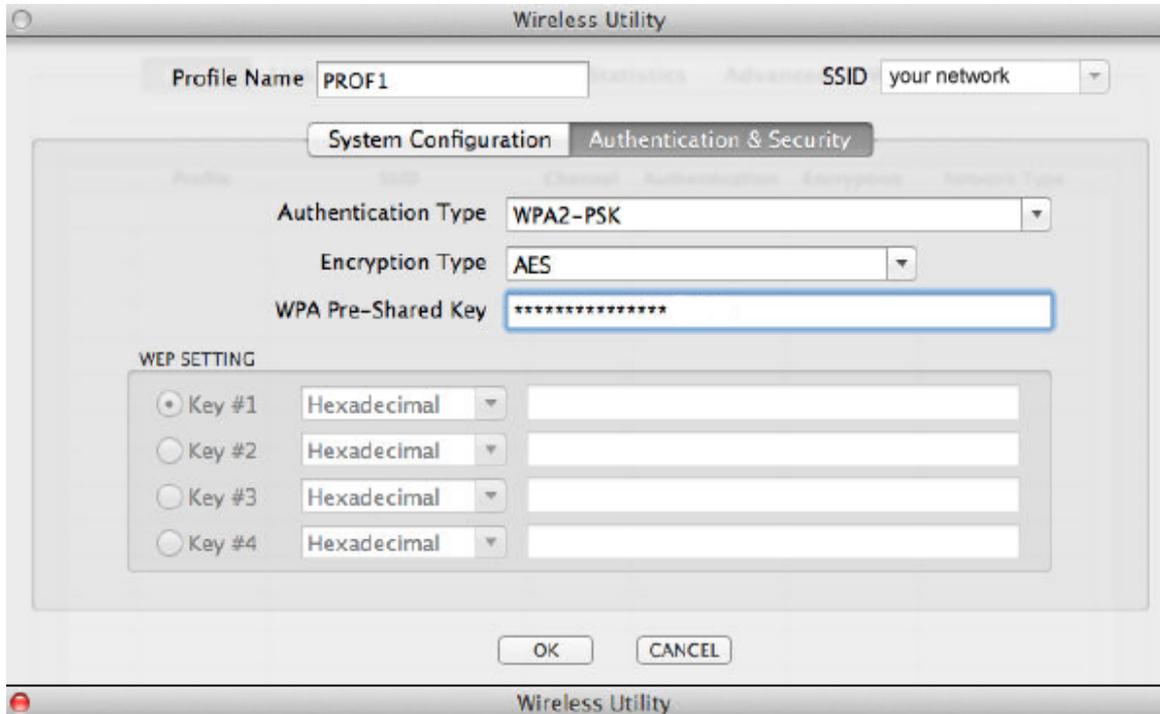

POWERLINK

Ralink Utility User Guide

POWERLINK

For questions, please visit our website www.premiertek.com